




Instruction Manual

使用說明書

Vertax Battery Grip
E21 For Canon 6D Mark II

電池盒兼手柄

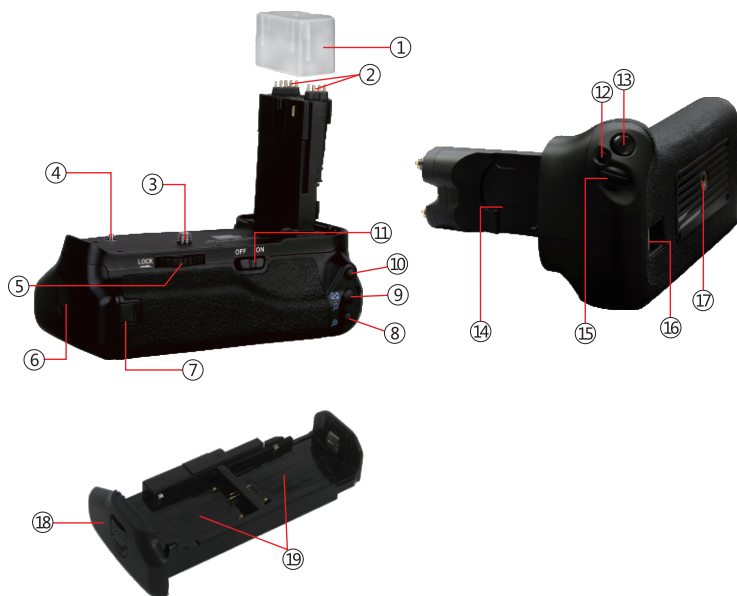

Name of each part (部件名稱)

- | | |
|-------------------------------------------------------|-----------------------|
| ① Protective cover | ① 保護蓋 |
| ② Electrical contacts | ② 電子觸點 |
| ③ Mounting Screw | ③ 固定螺釘 |
| ④ Guide pin | ④ 定位銷 |
| ⑤ Locking ring | ⑤ 裝卸旋鈕 |
| ⑥ Battery magazine release handle | ⑥ 電池倉鎖把手 |
| ⑦ DC cord mount | ⑦ 直流電源綫插孔 |
| ⑧ AF point selection/Magnify Button | ⑧ 自動對焦點選擇/放大按鈕 |
| ⑨ AE lock/FE lock /Index/Reduce button | ⑨ 自動曝光鎖/閃光曝光鎖/索引/縮小按鈕 |
| ⑩ AF start button | ⑩ 自動對焦啟動按鈕 |
| ⑪ Vertical-grip operation switch | ⑪ 縱向位置操作開關 |
| ⑫ Focus Area Selection Mode | ⑫ 對焦區域選擇模式 |
| ⑬ Shutter button | ⑬ 快門按鈕 |
| ⑭ Camera battery compartment cover slot | ⑭ 相機電池倉蓋槽 |
| ⑮ Main Dial | ⑮ 主撥盤 |
| ⑯ Hand strap mount | ⑯ 手提帶環 |
| ⑰ Tripod socket | ⑰ 三腳架接口 |
| ⑱ Battery Magazine BGM-E9L (for Lithium battery only) | ⑱ 電池夾BGM-E9L (鋰電池用) |
| ⑲ Battery pack compartment | ⑲ 電池倉 |

1



2




3-1



3-2



4-1

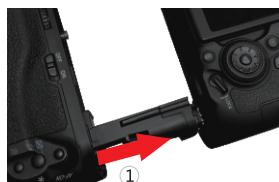


4-2



5



6

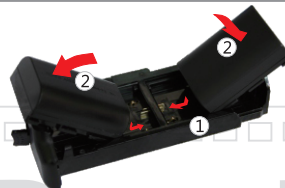

7-1



7-2



8



Battery Grip Vertax E21

Instructions

Thank you for purchasing a PIXEL product.
The Vertax E21 is a battery grip that can hold 2pcs battery LP-E6/LP-E6N batteries. It is also equipped with a vertical-grip shutter button. Main Dial, etc. to enable shooting in the same way as with horizontal grip.

Attach to the Camera


- 1. Remove the battery from the camera.(Fig.1)
- 2. Pull out the camera's battery compartment cover at a slanted angle to detach. (Fig.2)
- 3. Insert the detached cover into its storage slot to ensure that it will not be lost. (Fig.3-1)
When taking out the cover, press lightly on the cover hinge and pull it out upward at a slanted angle. (Fig.3-2)
- 4. Remove the protection cover, and then insert the electrical contacts into the camera battery compartment (Fig.4-1)
- 5. Align the attachment screw with the camera's tripod socket, and then turn the attach/detach knob to tighten securely. (Fig.4-2)
➢ Do not further push open the battery compartment cover when it is already open. Doing so may damage its hinge.
➢ Be sure to attach the battery grip to the camera before inserting the batteries. The results of the battery check may not be displayed properly if you attach the battery grip to the camera with the batteries already inside.
➢ Before moving the battery grip from the camera, be sure to turn the camera's power switch to (off), and take out the batteries. After removing the batteries, attach the protective cover to the electrical contacts.

Lithium Battery Installation

- 1. After flipping out the release handle, turn it as shown by the arrow, and then pull out the battery magazine (BGM-E9L). (Fig.5)
- 2. Insert one or two Battery LP-E6/LP-E6N into the battery magazine. (Fig.6)
- 3. Attach the battery magazine into the battery grip. (Fig.7-1) After attaching, check that the battery magazine is securely attached to the battery grip.
- 4. Close the release handle. (Fig.7-2)
➢ If only one battery is used, it may be inserted in either the right or left side.
➢ If two battery packs are inserted, power is supplied simultaneously by both batteries. Two batteries with different charging levels can be inserted and used without any problems.
➢ Removing the battery packs or size -AA/LR6 batteries from the battery grip when the camera will not be used for an extended period.

Using the Battery Grip

- 1. Turning the vertical-grip operation switch to (ON)(Fig. 8)make the battery grip buttons and dial function in the same way as those on the camera.
- 2. When shooting in the horizontal-grip position, turn the vertical-grip operation switch to (OFF) so that you do not accidentally use the buttons or dial on the battery grip.
- 3. Use the original LP-E6N batteries support to check the status of power as figure on the right, the third party batteries would not compatible and couldn't show the power status.

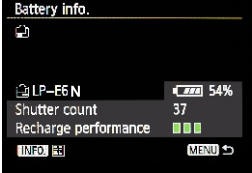

Specifications

Battery:	1 or 2 of LP-E6/LP-E6NBattery,
Power switch:	Camera's Power Switch
Working temperature:	0°C-+40°C
Working humidity:	85% Or Less
Dimensions:	Approx.145.7x113x85mm (5.3x4.4x3.3in)
Weight:	Approx.293.35 g (10.3oz) (without batteries and battery magazine)

The product specifications and exterior are subjected to change without notice.
This manual information is updated at 22st September, 2017 . If you wish to use this product combined with other Pixel products published after this date; please consult with the PIXEL dealer for further information.
Now you can start to use incredible PIXEL product. If you have any question, please contact your local dealer or visit to <http://www.pixelhk.com>.

電池盒兼手柄 Vertax E21

使用說明書

感謝你購買品色產品。
Vertax E21是一個可以裝兩個電池LP-E6/LP-E6N電池的電池盒兼手柄。本電池手柄還配有縱向位置快門按鈕、主撥盤等，使你在縱向拍攝時與橫向拍攝時的操作方式相同。
在使用本產品之前，請務必仔細閱讀本使用說明書。
請務必妥善保管好本書，以便日後能隨時查閱。
請在充分理解內容的基礎上，正確使用。

安裝到相機


- 1. 從相機中取出電池。（圖1）
- 2. 以傾斜的角度拉出相機的電池倉蓋以將其拆下。（圖2）
- 3. 將卸下的電池倉蓋插入存放區，以免丟失（圖3-1）。
當取出電池倉蓋時，請輕輕的按住電池倉蓋的轉軸，並以傾斜的角度向上將其拉出。（圖3-2）
- 4. 卸下保護蓋，然後將電子觸點部插入相機電池倉。（圖4-1）
- 5. 將固定螺釘與相機三腳架接孔對準，然後擰緊裝卸旋鈕。（圖4-2）
➢ 當電池倉蓋已打開時，請不要繼續推開倉蓋。這樣做可能會損壞電池倉蓋得轉軸。
➢ 在插入電池之前，請務必先將電池手柄安裝到相機上。如果您將已裝入電池的電池手柄安裝到相機上，則相機可能無法正確地顯示電池電量檢測結果。
➢ 將電池手柄從相機上卸下之前，請務必先將相機的電源開關到(OFF)位置并取出電池。取出電池後，請為電子觸點安裝保護蓋。

安裝鋰電池

- 1. 拔出電池倉鎖把手後，按照箭頭所示反向轉動，然後拉出電池夾（BGM-E9L）。（圖5）
- 2. 在電池夾中裝入單個或兩個電池 LP-E6 /LP-E6N。（圖6）
- 3. 將電池夾裝入電池手柄。（圖7-1）
- 4. 關閉電池倉鎖把手。（圖7-2）
➢ 如果祇使用單個電池，可將其裝在右側或左側。
➢ 如果安裝了兩個電池，則兩個電池同時供電。可裝入兩個電量不同的電池并且使用起來不會有任何問題。
➢ 長時間不使用相機時，請從電池手柄中取出電池。

使用電池手柄

- 1. 將縱向位置操作開關轉到(ON)位置(圖8)以使用電池手柄按鈕和撥盤功能與相機相應部分的功能相同。
- 2. 在進行橫向位置拍攝時，請將縱向位置開關轉到(OFF)位置，以免不小心使用電池手柄上的按鈕或撥盤。
- 3. 使用原廠LP-E6N電池可以在相機上查看電池電量，如右圖，副廠LP-E6N電池可能會不兼容而無法查看電池電量。

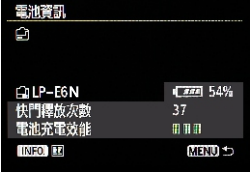

規格

電源	一個或兩個電池LP-E6/LP-E6N
電源開關	相機的電源開關
工作溫度範圍	0°C-+40°C
工作濕度範圍	85%或更小
尺寸	約145.7(寬)x113(高)x85(厚)mm
重量	約293.35克(不含電池和電池夾的重量)

產品規格及外觀如有變化，恕不另行通知。
本說明書中的信息更新至2017年09月22日，如果要與此日期之後發布的產品組合使用，有關信息請向品色經銷商諮詢。
現在，你可以體驗無與倫比的品色產品。如有任何疑問可以向當地經銷商諮詢，或登陸 <http://www.pixelhk.com.cn>查詢

制 造 商：深圳市品色科技有限公司
地 址：深圳市龙华新区龙华人民路美丽AAA大厦1411
电 话：400-8084899
执行标准：Q/PSKJ 003-2016